

# Analog-Digital Belt Watch



DTC #42168

## FUNCTION READING (DIGITAL)

Normal Display:

Hour, minutes, seconds and day of the week

**Push D:** For alarm time

**Push B:** For mode

**Push C:** For month and date

## SETTING THE ANALOG WATCH TIME

Pull the crown out to the first click and set the time.

When finished push the crown in.

## NORMAL TIME AND DATE SETTING

In normal time mode push B three times to switch to normal time and date setting.

(The day "Tue" should be flashing)

Push **D** to select the flashing digits of seconds, minutes, hours, day, month.

Push **C** to advance the respective digits. Select 12/24 hours mode by advancing the hour digits until AM or PM will be shown in the display for 12 hours mode or none of AM/PM will be shown. (24 hours mode)

Push **B** to return to normal time.

## CHIME ON/OFF

Hold **D**, push **B** in normal time mode.

All day names appear = chime ON,  
all day names disappeared = chime OFF.



## ALARM ON/OFF

Hold **D**, push **C** in normal time mode.

If sound icon appears =  
alarm ON, if sound icon  
disappears = alarm OFF.


## SETTING THE ALARM

In normal time mode push B twice to switch to alarm time setting. Note: You can only set the alarm to go off on a specific day. If set, the alarm will chime at the same time everyday. After you set the alarm to the time you want and the alarm starts to chime, push **D** to stop alarm chime sound.

Push **D** to switch between hours and minutes.

Push **C** to advance the respective digits.

Push **B** again to return to normal time.

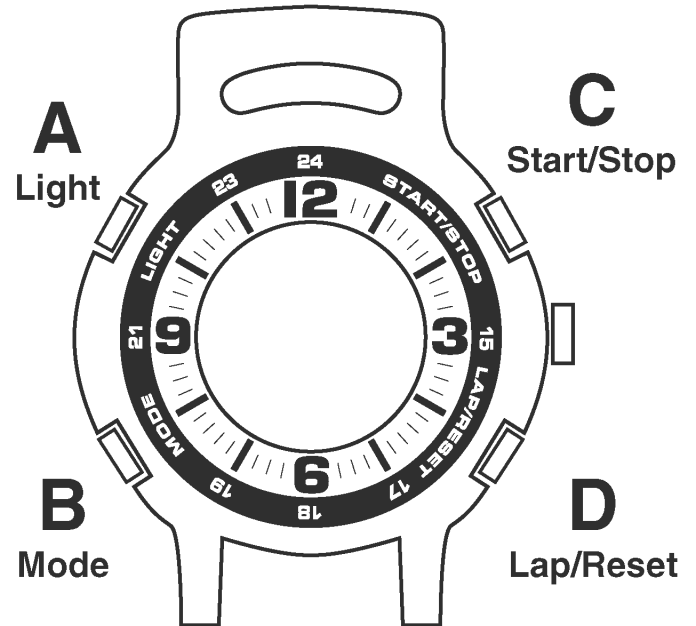

## STOP WATCH FUNCTION

Push **B** once when in normal time mode to switch to stopwatch mode.

Push **C** for start/stop function.

Push **D** while counting for lap (split) time and push **D** again to resume counting.

Push **C** to stop and **D** to clear when stopped counting to reset to zero.

## CARE AND FEEDING

Avoid exposing your watch to water, steam, or other forms of moisture if it is non-water-resistant. If the crystal/lens becomes damaged, have it replaced at once to avoid damage to the module. When your battery is depleted, have it replaced promptly.

## BATTERY REPLACEMENT

When readout becomes dim, or there is no display, it is time to replace the battery. Replace with: UCC 392, Renata 2 or Toshiba LR41 or equivalent.

GuardDog Watch and Clock, LLC and Duluth Trading Co. strongly recommend taking your watch to a local watch retailer, jeweler or watch repair service to have the battery replaced. Opening the case back without specialty tools and expertise is likely to result in damage.